

UBB MIKROTIK WIRELESS ROUTER SETUP

*Power ON the Mikrotik HAP AC Lite Router with the power cable provided.

NOTE- the power supply is unique to the Mikrotik router, please do not use 3rd party supplies, contact UBB for replacement parts if damaged.

*Once powered ON plug the Ethernet cable from **LAN1** of the Mikrotik router to **LAN** port of POE adapter. Plug the cable coming in from the wall into the POE port of POE adapter. (unless otherwise advised by UBB).

*Wi-Fi details are found on a sticker provided in the router box.

Please don't reset the unit as your connection will no longer work. In order to restore services, a replacement router will be supplied which will be billable or engineering charges will apply to restore services remotely if possible.



If you have any questions, please contact our helpdesk on

0800 000 945.