


0800 000 945


ultimatebroadband.co.nz

## B315 FIRMWARE SETUP GUIDE

1. Power up router with Live SIM and connect PC. Enter IP address of 192.168.1.1 into Web gui, Login with user: admin password: admin and don't change the password for the router

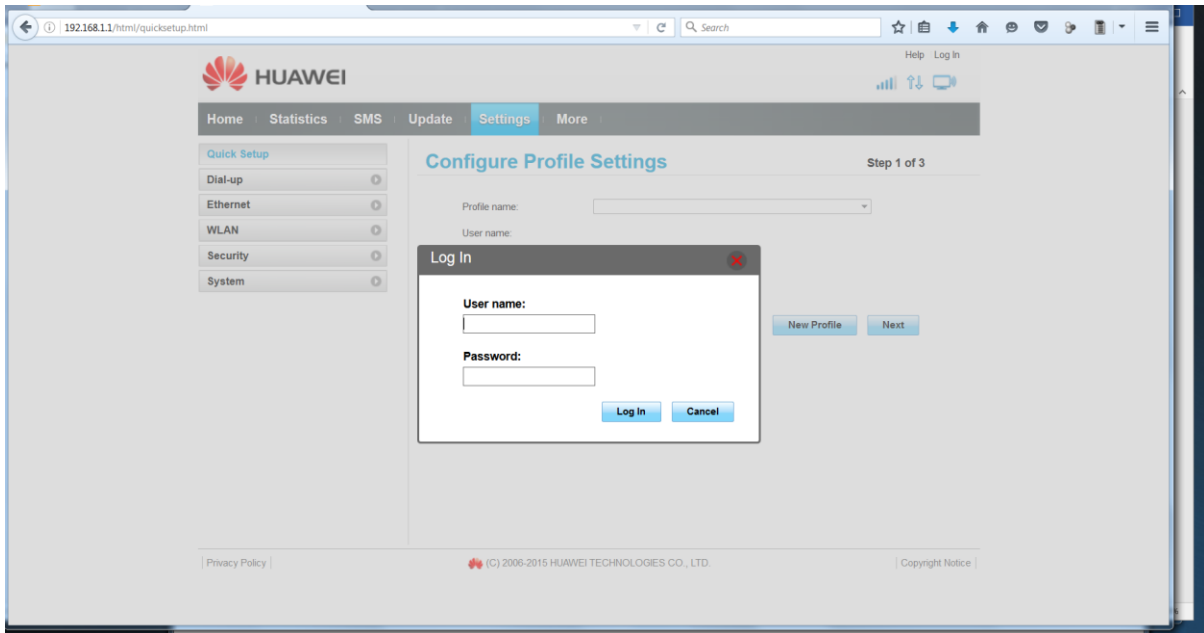

2. Select "settings" Go to system and select "Antenna Settings"

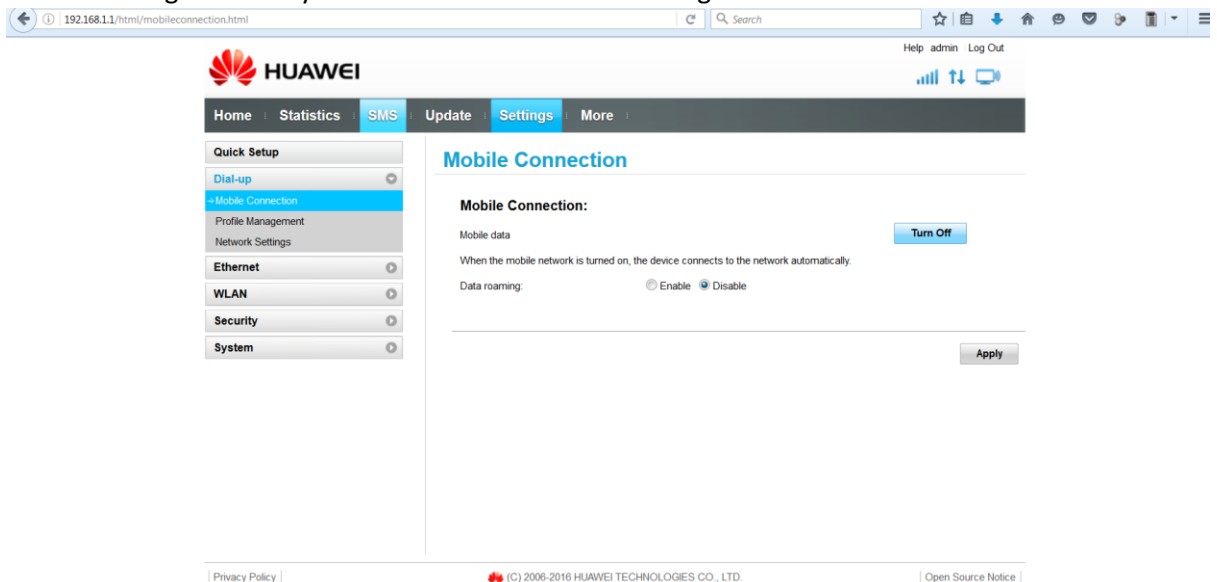

192.168.1.1/html/smsinbox.html

0800 000 945

192.168.1.1/html/antenna.html

Help admin Log Out

HUAWEI

Home Statistics SMS Update Settings More

Quick Setup  
Dial-up  
Ethernet  
WLAN  
Security  
System  
Device Information  
Modify Password  
Diagnosis  
Restore Defaults  
Reboot  
Date & Time  
Antenna Settings  
Update Settings

### Antenna Settings

You can select an antenna type for your router.

Install the external antennas based on the antenna type settings you configured.

Antenna: Auto

Please use only external antennas provided by your carrier. If you experience any issues from using third-party external antennas, contact your carrier to purchase a set of certified antennas.

Antenna 1: Built-in

Antenna 2: Built-in

Apply

Privacy Policy | (C) 2006-2016 HUAWEI TECHNOLOGIES CO., LTD. | Open Source Notice

3. Select antenna type as below & apply  
**Built in – no antenna**  
**Single antenna – single roof antenna**  
**Dual Antenna – Dipole or Dual roof antenna**