

THE HEART OF CONNECTIVITY



WIRELESS UBB FRITZBOX SETUP GUIDE

*Power ON the FritzBox with the power cable provided.

NOTE- the power supply is unique to the FritzBox, please do not use 3rd party supplies, contact UBB for replacement parts if damaged.

*Once powered ON plug the Ethernet cable from **LAN1** of the FritzBox to the **LAN** port of the radio power supply. Plug the radio cable to the roof into the **POE** port.

Please do not use the DSL port, this is for DSL/VDSL services only.

*Wi-Fi details are found on a sticker at the front of the FritzBox.

*If you need to login to the FritzBox to change any settings, this can be accessed from your web browser with the following:

Web Address: 192.168.1.1

Username: admin

Password: admin123

Please don't reset the unit as your connection will no longer work.

PHONE:

If you have a VoIP landline add on with us, plug the line cord provided into the **FON** port and the other end of the line cord into your existing phone.

If you have any questions, please contact our helpdesk on 0800 000 945.

THE HEART OF CONNECTIVITY



WIRELESS

